

To all residents:

We have been advised that Multichoice has introduced a new transponder to their bouquet.

Channels 183 (Style) and 124 (E) have now moved to the new transponder. There will also apparently be moving other channels to the new transponder over a period of time. Hopefully we will be advised as and when this occurs.

You will now have to re-program your decoder in order to cater for the changes made as follows:

We have re-programmed the internal equipment in the Estate to cater for these changes and apologise to all for the recent loss of viewing on the channels

Please Note: The menus have been condensed, so check and change the locked options

After the decoder has finished scanning, do not change channels for 20 minutes so that the frequencies can be stored in the memory.

1. MAIN MENU - Go to

(Use down arrow to move yellow bar)

- 1 Information Central
- 2 Parental Control
- 7 **Advanced Options** Press OK



If Animal Planet is not available check Network 2 set
If Fashion is not available check Network 3 setup.
If C&I is not available check Network 4 setup.
If Weather is not available check Network 5 setup.
If ESPNC is not available check Network 6 setup.
If E! is not available check Network 7 setup.

2. ADVANCED OPTIONS - Go to

- 1 **Dish Installation** Press OK
- 2 Signal Detection

3. SECURITY CHECK

PIN code 9 9 4 9

4. DISH INSTALLATION - Go to

- 1 **Home Network** **IS 7 / 10** Press OK
- 2 Network 2 Disabled
- 3 Network 3 Disabled

Use left arrow button to find

5. DStv PAS 7 - Change to read as follows

- 1 Satellite Name **IS 7 / 10**
- 2 LNB power is : ON
- 3 LNB Mode : Dual Frequency
- 4 LNB Lo frequency : 9 7 5 0
- 5 LNB Hi frequency : 1 0 7 0 0
- 6 Frequency 1 1 5 9 4
- 7 Symbol Rate 2 7 5 0 0
- 8 FEC 5/6
- 9 Polarisation Vertical
- 10 Use NIT YES
- 11 **Accept all displayed values and leave screen** Press OK

Use arrow button to find

Press OK - half line will change to grey - change number then press OK

6. DISH INSTALLATION - Go to

- 1 Home Network OTHER
- 2 **Network 2** **OTHER** Press OK
- 3 Network 3 Disabled

Use left arrow button to find

7. OTHER - Change to read as follows

- 1 Satellite Name **IS 7 / 10**
- 2 LNB power is : ON
- 3 LNB Mode : DUAL Frequency
- 4 LNB Lo frequency : 9750
- 5 LNB Hi frequency : 10700
- 6 Frequency 1 1 2 1 0
- 7 Symbol Rate 3 0 0 0 0
- 8 FEC 5/6
- 9 Polarisation Vertical
- 10 Use NIT **S M A T V**
- 11 **Accept all displayed values and leave screen** Press OK

Use arrow button to find

Press OK - half line will change to grey - change number and press OK

Right arrow button

8. DISH INSTALLATION - Go to

- 1 Home Network OTHER
- 2 Network 2 OTHER
- 3 **Network 3** **OTHER** Press OK

Use left arrow button to find

9. OTHER - Change to read as follows

- 1 Satellite Name **IS 7 / 10**
- 2 LNB power is : ON
- 3 LNB Mode : DUAL Frequency
- 4 LNB Lo frequency : 9750
- 5 LNB Hi frequency : 10700
- 6 Frequency 1 1 2 5 0
- 7 Symbol Rate 3 0 0 0 0
- 8 FEC 5/6
- 9 Polarisation Vertical
- 10 Use NIT **S M A T V**
- 11 **Accept all displayed values and leave screen** Press OK

Use arrow button to find

Press OK - half line will change to grey - change number and press OK

Right arrow button

10. DISH INSTALLATION - Go to

1 Home Network OTHER
4

Network 4	OTHER	Press OK
------------------	--------------	-----------------

 Use left arrow button to find

11. OTHER - Change to read as follows

1 Satellite Name **IS 7 / 10** Use arrow button to find
2 LNB power is : ON
3 LNB Mode : DUAL Frequency
4 LNB Lo frequency : 9750
5 LNB Hi frequency : 10700
6 Frequency

1 1 2 9 0

 Press OK - half line will change to
7 Symbol Rate

3 0 0 0 0

 grey - change number and press OK
8 FEC 5/6
9 Polarisation Vertical
10 Use NIT

S M A T V

 Right arrow button
11

Accept all displayed values and leave screen Press OK
--

12. DISH INSTALLATION - Go to

4 Network 4
5

Network 5	OTHER	Press OK
------------------	--------------	-----------------

 Use left arrow button to find

13. OTHER - Change to read as follows

1 Satellite Name **IS 7 / 10** Use arrow button to find
2 LNB power is : ON
3 LNB Mode : DUAL Frequency
4 LNB Lo frequency : 9750
5 LNB Hi frequency : 10700
6 Frequency

1 1 3 3 0

 Press OK - half line will change to
7 Symbol Rate

3 0 0 0 0

 grey - change number and press OK
8 FEC 5/6
9 Polarisation Vertical
10 Use NIT

S M A T V

 Right arrow button
11

Accept all displayed values and leave screen Press OK
--

14. DISH INSTALLATION - Go to

5 Network 5
6

Network 6	OTHER	Press OK
------------------	--------------	-----------------

 Use left arrow button to find

15. OTHER - Change to read as follows

1 Satellite Name **IS 7 / 10** Use arrow button to find
2 LNB power is : ON
3 LNB Mode : DUAL Frequency
4 LNB Lo frequency : 9750
5 LNB Hi frequency : 10700
6 Frequency

1 1 3 7 0

 Press OK - half line will change to
7 Symbol Rate

3 0 0 0 0

 grey - change number and press OK
8 FEC 5/6
9 Polarisation Vertical
10 Use NIT

S M A T V

 Right arrow button
11

Accept all displayed values and leave screen Press OK
--

16. DISH INSTALLATION - Go to

5 Network 5
6

Network 7	OTHER	Press OK
------------------	--------------	-----------------

 Use left arrow button to find

17. OTHER - Change to read as follows

1 Satellite Name **IS 7 / 10** Use arrow button to find
2 LNB power is : ON
3 LNB Mode : DUAL Frequency
4 LNB Lo frequency : 9750
5 LNB Hi frequency : 10700
6 Frequency

1 1 4 1 0

 Press OK - half line will change to
7 Symbol Rate

3 0 0 0 0

 grey - change number and press OK
8 FEC 5/6
9 Polarisation Vertical
10 Use NIT

S M A T V

 Right arrow button
11

Accept all displayed values and leave screen Press OK
--

18. DISH INSTALLATION - Go to

1 Home Network OTHER
2 Network 2 OTHER
3 Network 3 OTHER
8 Scan New Network(s)
9

Scan All Networks	Press OK
--------------------------	-----------------